



MODEL : 2-inch Label
MOBILE PRINTER

All specifications are subject to change without notice



**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)


This symbol on the product or on its packaging indicates that this product shall not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronics equipment. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Table of Contents


1. Product overview	3
2. Unpacking	4
3. Installation & Usage	5
3-1. Battery Installation	5
3-2. Battery Charging	6
3-3. Battery Charger Usage	7
3-4. Belt Strap Usage	8
3-5. Separation of Battery from the printer	9
3-6. Shoulder Strap Usage	10
3-7. Leather case Usage	11
3-8. Loading the paper	12
3-9. Control Panel Usage	13
3-10. Self Test	14
4. Peripherals Connection	16
4-1. Bluetooth Connection	16
4-2. Interface Cable Connection	17
5. Printer Cleaning	18
6. Product Specification	19
6-1. Specification	19

1. Product overview

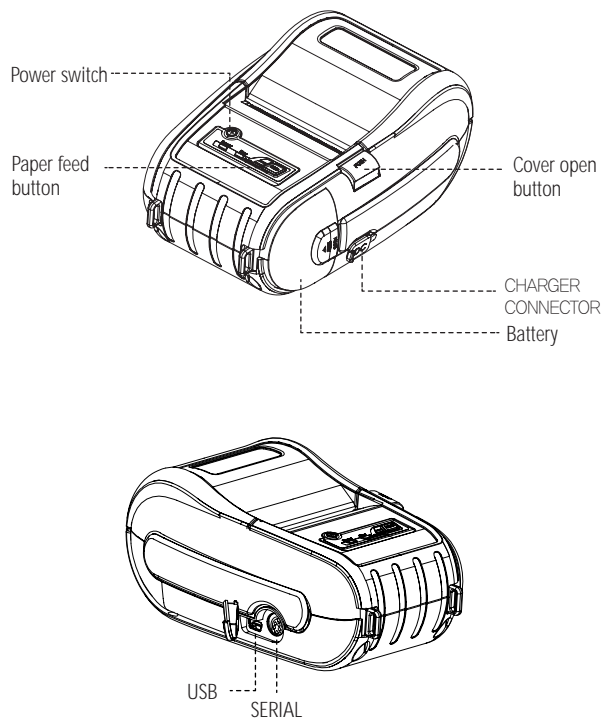


2. Unpacking

Standard

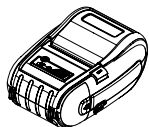


Printer

 


Battery




Belt Buckle

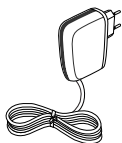


Recharger

 

USB Shilded Cable

 

Serial Cable

 

Roll paper



CD




Quick Manual

Option




Printer case

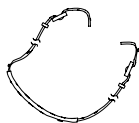


shoulder strap

3. Setting Up the Product

3-1. Installing battery

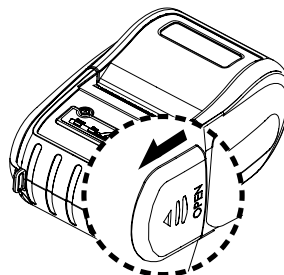


Push the Open to the direction as pointed by arrow in the image.

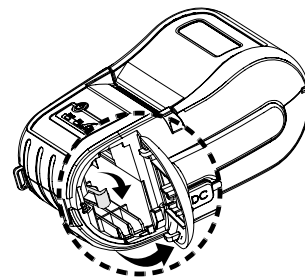


Open the battery cover and push up the hook to the direction as above.

1 2
3

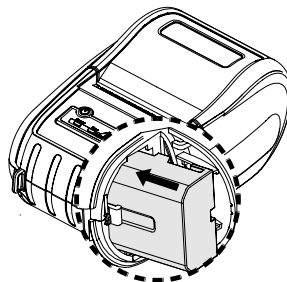


Insert the battery inside printer as shown.

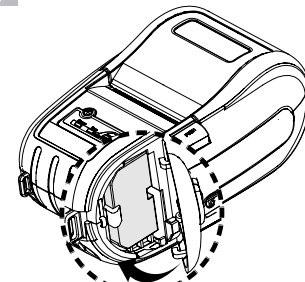

Close the battery cover once you inserted the battery completely.

Notes: As the battery is not charged at the time of your purchase, charge the battery prior to using the product.
(Use the battery charger and/or the optional battery holder.)

3-2. Battery Charging

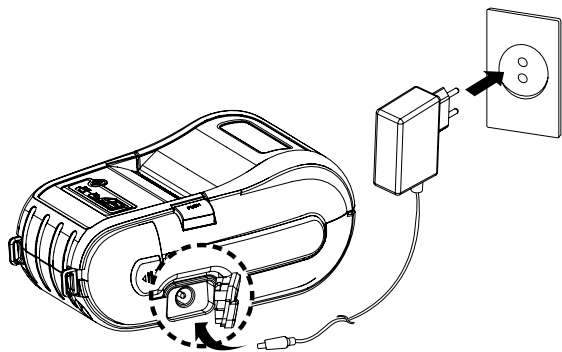

1. The battery can be charged only when the temperature is 0~40℃
2. Be sure that the printer is turn off and the battery to be charged is installed.
3. Connect the charger to the printer.
4. Recharging will now be started.


Notes:

1. **Do not turn on the printer power while you are charging the battery.**
2. **Do not print while charging the battery**
3. **Do not connect the charger to the printer on the process of printing.**

3-3. Battery charger Usage


1. Please press the battery into the holder until you can hear a snapping sound .
 2. Insert DC JACK ① into the end completely as the direct shown above.
 3. Plug the power code to electrical outlet.
 4. While charging the battery, red light turns on.
- Once the charge is completed, green light turns on.
Check the state of code connection when error occurs blinking on red light.

3-4. Belt Hook Usage

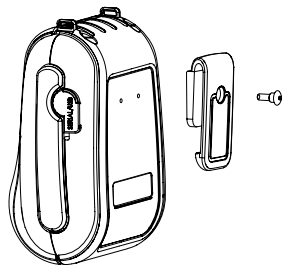


Insert the belt hook screw into the hole of the belt hook.

1
2

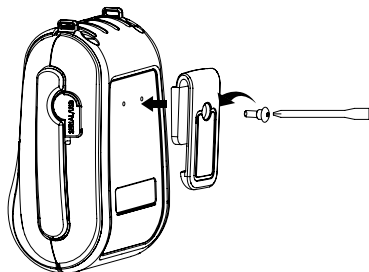


As shown above, fasten the screw with a screw driver.

3-5. Removing battery

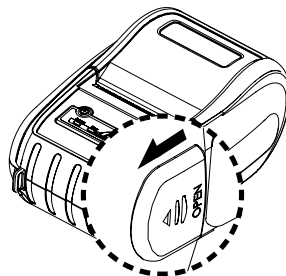


Push the Open into the direction indicated with the arrow in the image.

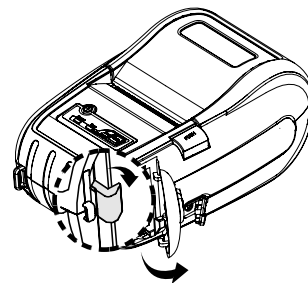


Push up the hook after opening the battery cover.

1 2
3

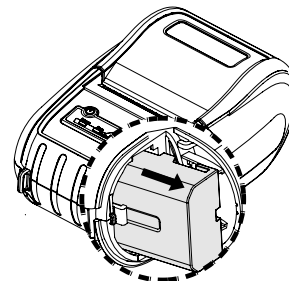


Pull out the battery as shown above.

3-6. Shoulder Strap Usage

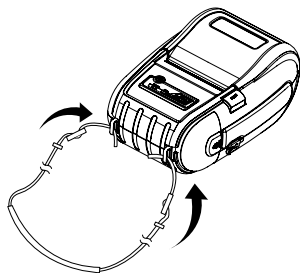


Insert the strap into the hook on the printer.

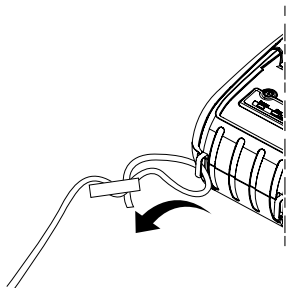


Place the end of strap into the hook of shoulder strap.

1 2
3 4

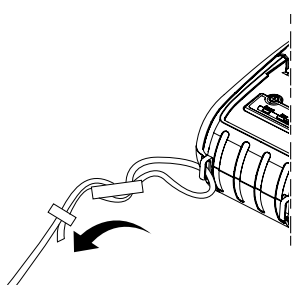


After pulling out the end of strap tightly, put it into the clip to be fastened.

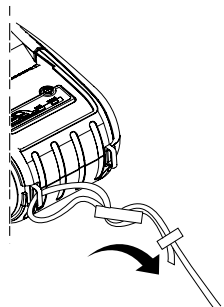


Fasten the strap in the opposite side with the sample way.

3-7. Leather Case Usage

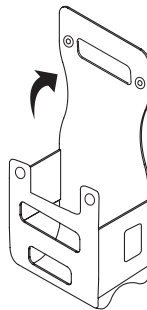


Open the Velcro

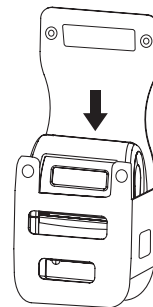


Put the printer into the leather case following the direction shown in the

1 2
3

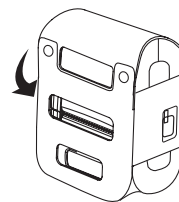


Close the Velcro

3-8. Loading the media.

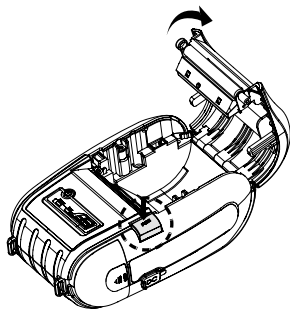


Press the cover open button and open

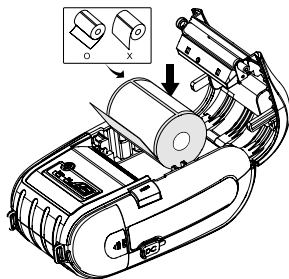


Place the paper roll as shown. Make sure the paper is placed in right direction.

1 2
3 4

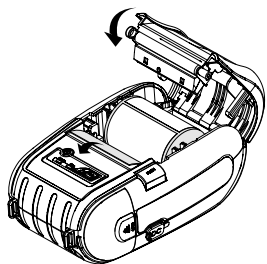


Pull a short length of paper out of the printer and close the cover.

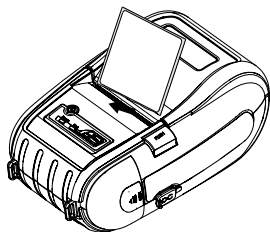

Press Feed button and let the paper be arranged properly for printing.

3-9. Control Panel

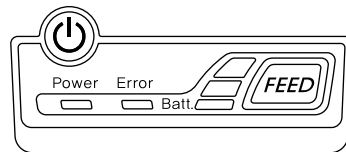

Button	Name	function
	Power button	This button is used to turn the printer on and off. When the printer is off, press this button for approximately 2 seconds and it will turn on the power. When you press this button in a state that the printer is on, the printer will turn off.
	Paper Feed Button	Paper output can be done manually by pressing this button. Additionally, self-testing and Hexadecimal Dumping can be processed.. 1. Refer to "3-10" for self test information. 2. Refer to the service manual regarding Hexadecimal Dumping.
	Battery Status Lamp	1. If the Batt, LED are Lit, the battery is fully charged. 2. If you can hear beeping sound and LED light is turned off, it means that the battery is at the lowest level. 3. If the battery is not charged at all, the printer turns off automatically.
	Error Lamp	If the red light is turned on, it means that the paper cover is open.

3-10. Self Test

You can check the printer setting state by doing self test when you set the printer first time or encounter some problems.

- Control Circuit, Mechanisms, Print Quality, Rom version.

When you can not find the exact cause of problem through self test, investigate on other hardware parts or software. This function is independent of other devices and software.

● Self -Test Instructions

1. Turn the printer power off and close the printer paper cover.
2. While pressing the paper feed button, turn on the printer power.
3. The printout is producing
4. To add a printout of the Hex-Dump mode, press the paper feed button once more.

< Sample Printout of Self Test >

```

*****
SERIAL TEST, LK-F11
*****
Ver: LPT1XXXXX1

*****
Serial Interface
- Baudrate: 18200
- Data bit: 8 bit
- Parity bit: none
- Stop bit: 1 bit

*****
USB
- version: 2.0 Full speed compl
iant
- Vendor: 0x0483
- Product: 0x5780
- Product String: LK-F11

*****
NLS1001#
- Mac Address:
00:13:7b:e1:c8:5e

*****
Print Fonts
-----
Font   Size   Char
-----
0    3    6   20"FF
1    0    0   20"8D
2    0    1   20"56
3    0    7   20"FF
4    0    3   20"77
5    0    1   20"44
6    0    1   20"FF

*****
Directory
File List
-----
Name                               Size
5785"Z Bytes Tree


Command Language:
CCL Code: "1"12"3

*** Complete Self Test ***
    
```

4. Peripherals Connection


This product can communicate with other devices via Bluetooth communication and cable.

4-1. Bluetooth Connection

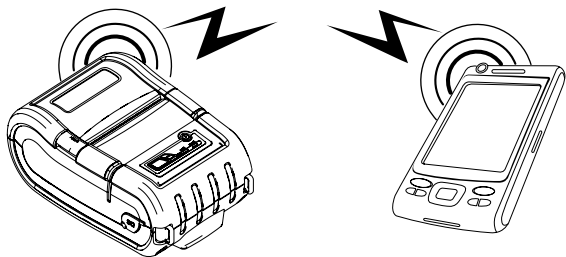

1. The printer can be connected to devices equipped with Bluetooth communication capacity (PDA, PC, etc.)
2. Use the Bluetooth connection function supported by the device to connect to the printer.

4-2. Interface Cable Connection

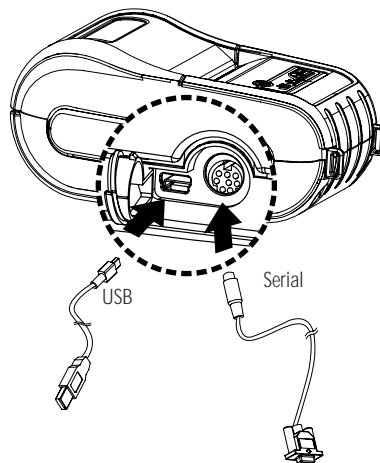

1. Connect the interface cable to the cable connector of the printer

Notes: Use only cables provided by this manufacturer


2. Connect the interface cable to the USB or Serial port of the device (PDA, PC, etc)

5. Printer cleaning

If the interior of the printer is dusty, printing quality can lowered. In such a case, follow the instructions below to clean up the printer.

NOTE

1. Make sure to turn the printer power off prior to cleaning
2. Regarding print head cleaning, as the print head sets very hot during printing, turn off the printer power and wait approximately 10 minute before commencement.
3. When cleaning the print head, take care not to touch the heated portion of the print head. The print head subject to be damaged by static electricity.
4. Take care not to allow the print head to become scratched and /or damaged in

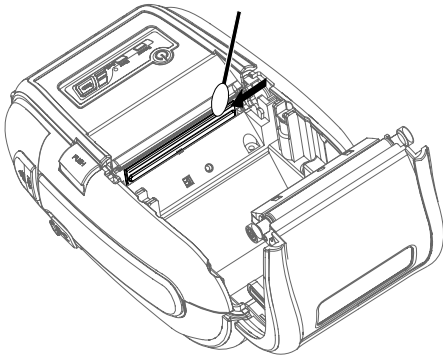

1. Use an applicator swab moistened with an alcohol solution to clean the print head and remove any dusts.
2. Once the cleaning is completed, insert paper roll into the printer few minutes later and close the printer cover.

6. Pritner Specification

6-1. Specification

Printing Method	Direct Thermal	
Printing Speed	80mm/sec	
Resolution	203 DPI X 203 DPI	
Character	ALPHA NUMERIC Character, Extension Character	
Barcode	Code 39, Code 93, UCC/EAN-128, Code 128, UPC-E, UPC-A, EAN-8, EAN-13, EAN-14, UPC and EAN 2 or 5 digit extensions, Plessey, FIM, Postnet, Interleaved 2-of-5, MSI, Codabar	
Emulation	CPCL	
Driver	Window CE 4.2&5.0, Window Mobile 5.0	
Sensor	Black-mark, Gap, cover open	
Paper	paper type	Thermal Paper
	width	58mm
	thickness	65 μ l
	External Diameter	Max. ϕ 56mm
	Internal Diameter	12.5mm +/-0.5mm
Reliability	TPH	100km
Communications	standard	Serial(RS-232C), USB, Bluetooth Class2
	option	Wireless Lan *802.11b/g
Battery Charger	input	AC100~240V, 50/6 Hz
	output	8.4V , 1200 mA
Battery Charger	Battery type	Li-on
	output	7.2V, 2400mAh
	Charging time	2 Time
Size	WXDXH(mm)	104 X 74 X 154
	WXDXH"	4.0 X 2.9 X 6.0
Weight	500g	

Temperature	operation	5~40℃
	storage	-20~60℃
Humidity	operation	35 ~ 80%
	storage	10 ~ 90%

